

TEE TEST POINT

(COMP-0023-TP-ABS-R25 - 25mm)



EN

Used when the system has to be periodically tested. The capillary Tee piece is installed in the pipe run at the easily accessible position. It has a removable protection cap which fits over the nylon tubing when the system is being used normally. When testing is required simply remove the protective cap, test and replace once completed.

Installation Instructions:

Use the correct solvent Plusbond 3019. Do not paint. Keep pipe clean and free from dust. Do not install in direct sunlight. Only install with approved pipe. Do not use solvents to clean, only soapy water.

TR

Sistemin periyodik olarak test edilmesi gerektiğinde kullanılır. Kılcal Tee parçası boru hattına kolayca erişilebilecek bir konumda monte edilir. Sistem normal şekilde kullanılırken naylon hortumun üzerine oturan çıkarılabilir bir koruma kapağına sahiptir. Test gerektiğinde sadece koruyucu kapağı çıkarın, test edin ve tamamlandığında yerine takın.



Kurulum Talimatları:

Doğru solvent Plusbond 3019 kullanın. Boya yapmayın. Boruyu temiz ve tozsuz tutun. Doğrudan güneş ışığı altında montaj yapmayın. Sadece onaylı boru ile monte edin. Temizlemek için solvent kullanmayın, sadece sabunlu su kullanın.


PART NO.:
COMP-0023-TP-ABS-R25

**DIAMETER
TOLERANCE:**
+/- 0.15mm


FITTINGS COLOUR:
Red

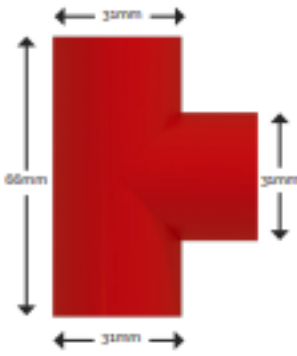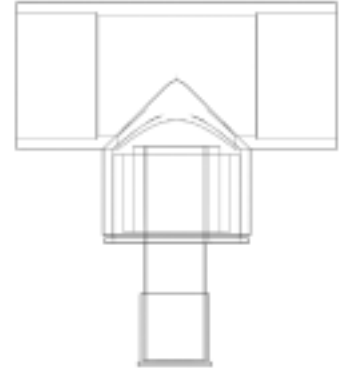

TEE ADAPTOR

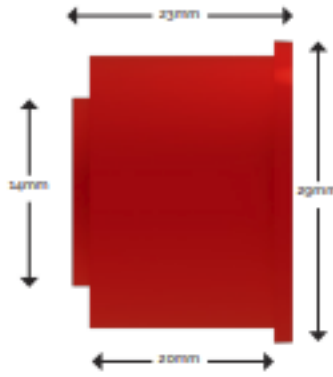

CAPILLARY ADAPTOR

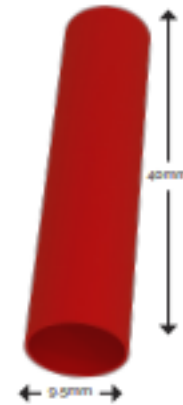

NYLON TUBE



PROTECTION CAP

